



BILLY PUGH Co., Inc.


X-904

(4, 6 or 8 man)

Stretcher Procedures

www.billypugh.com


Excellence in offshore personnel safety

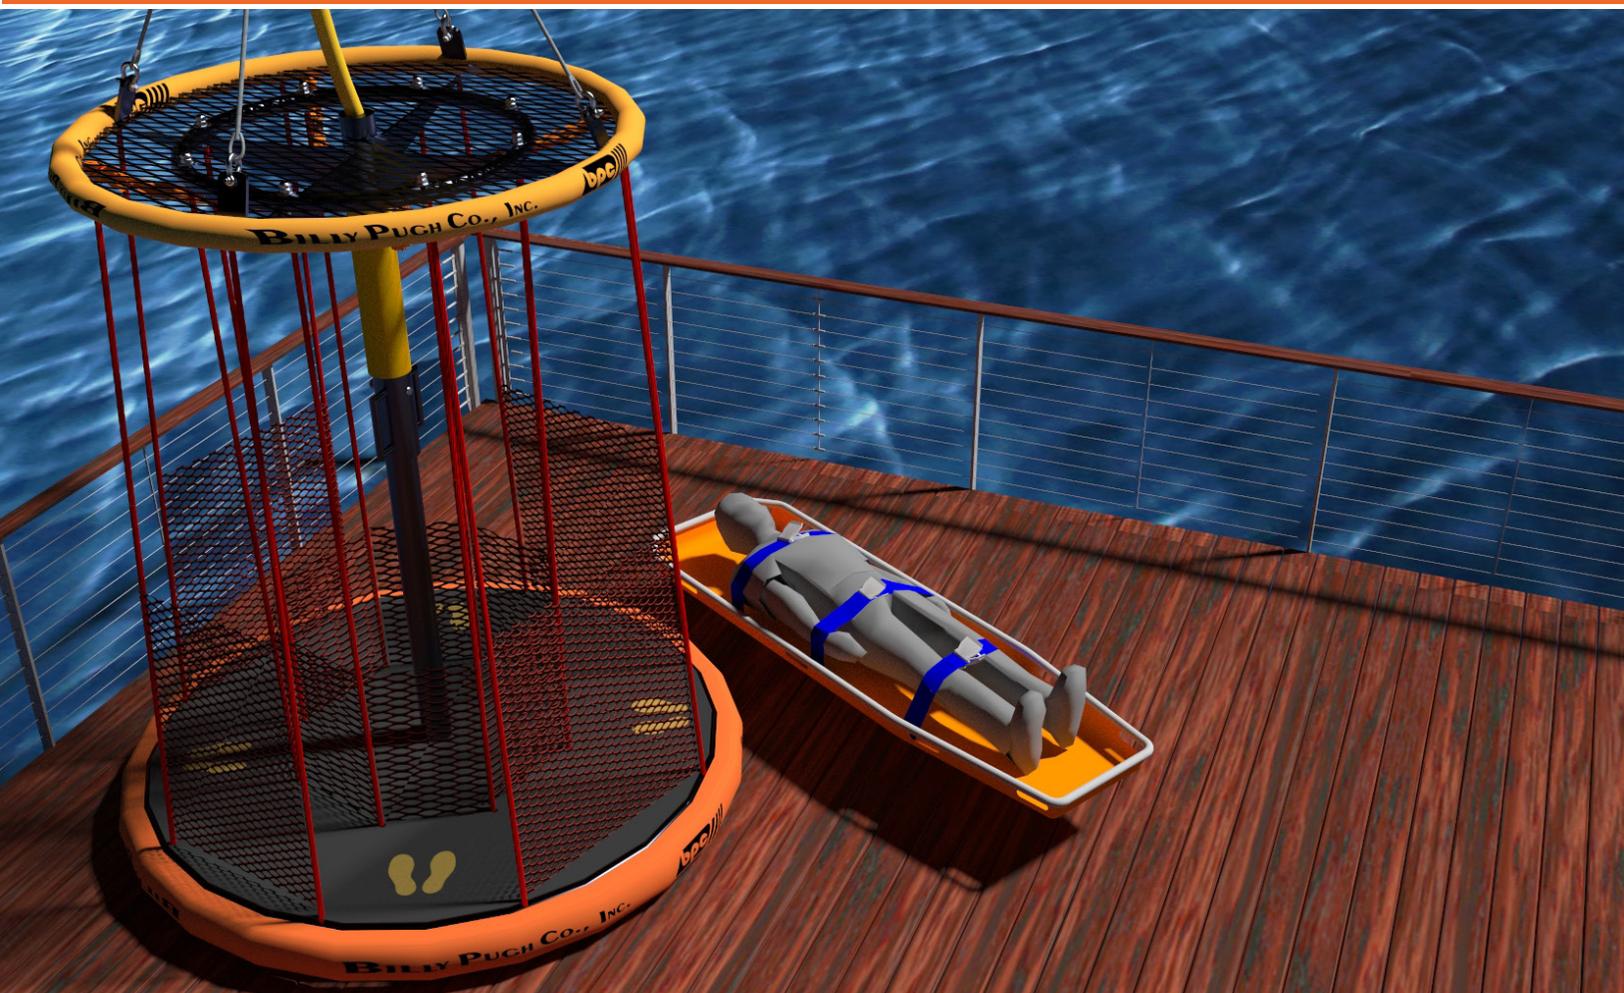


1

Step #1 – Placing the stretcher inside the X-904.

1. With X-904 in the working position, carry one end of the stretcher in through any opening and out through the adjacent opening. With the center of the stretcher inside the X-904, lower the stretcher to the floor.

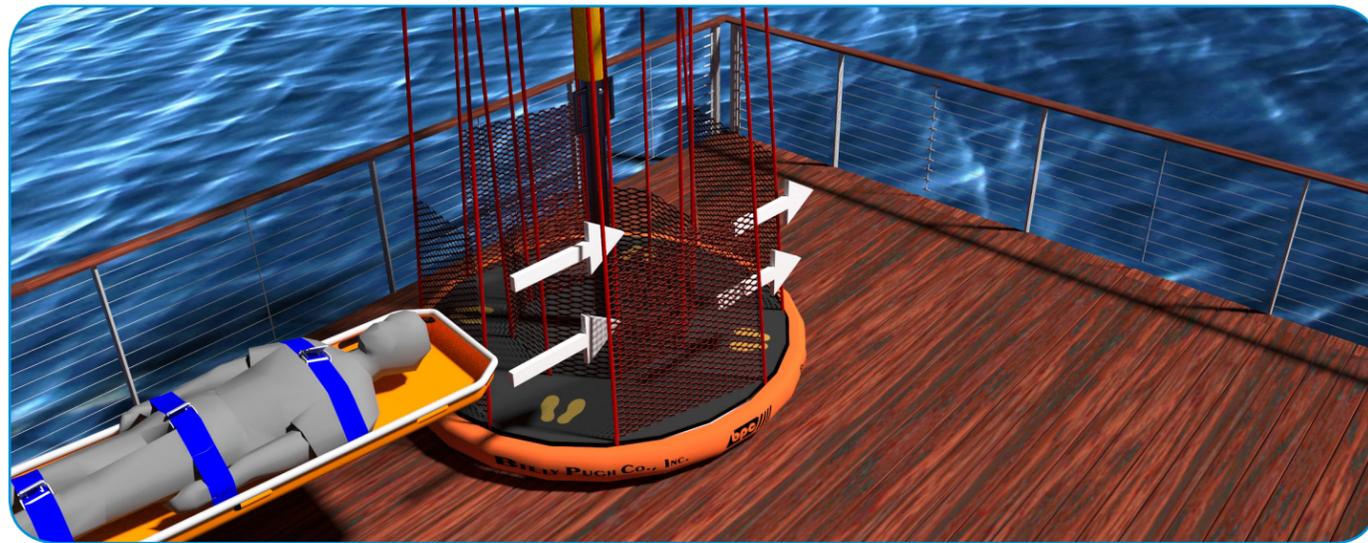

2. Vertical grab lines will expand to accommodate the width of the stretcher.

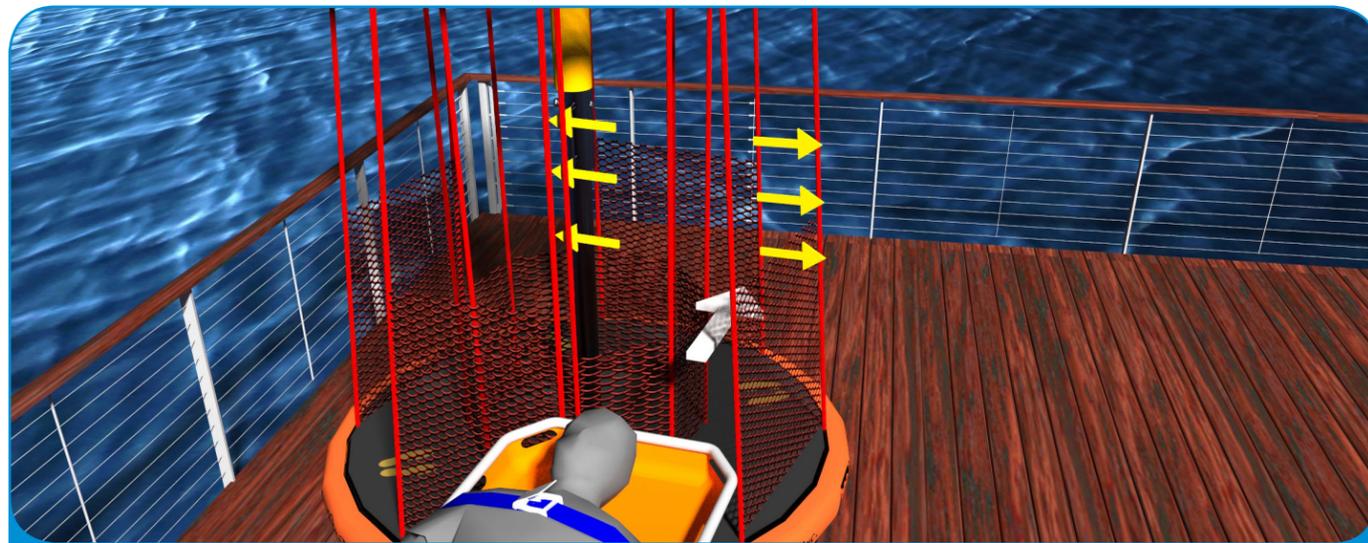

Vertical grab lines expand when stretcher is carried through opening

2

Step #2 – Secure the stretcher.

1. Tie off stretcher using the X-904's outer vertical grab lines.



Stretcher tie off positions



Example using shackle

Step #3 – Boarding with stretcher.

1. Riders may accompany patient either as passengers (in the standing position) or as attendants (in the kneeling position).


3



Passengers



Attendants

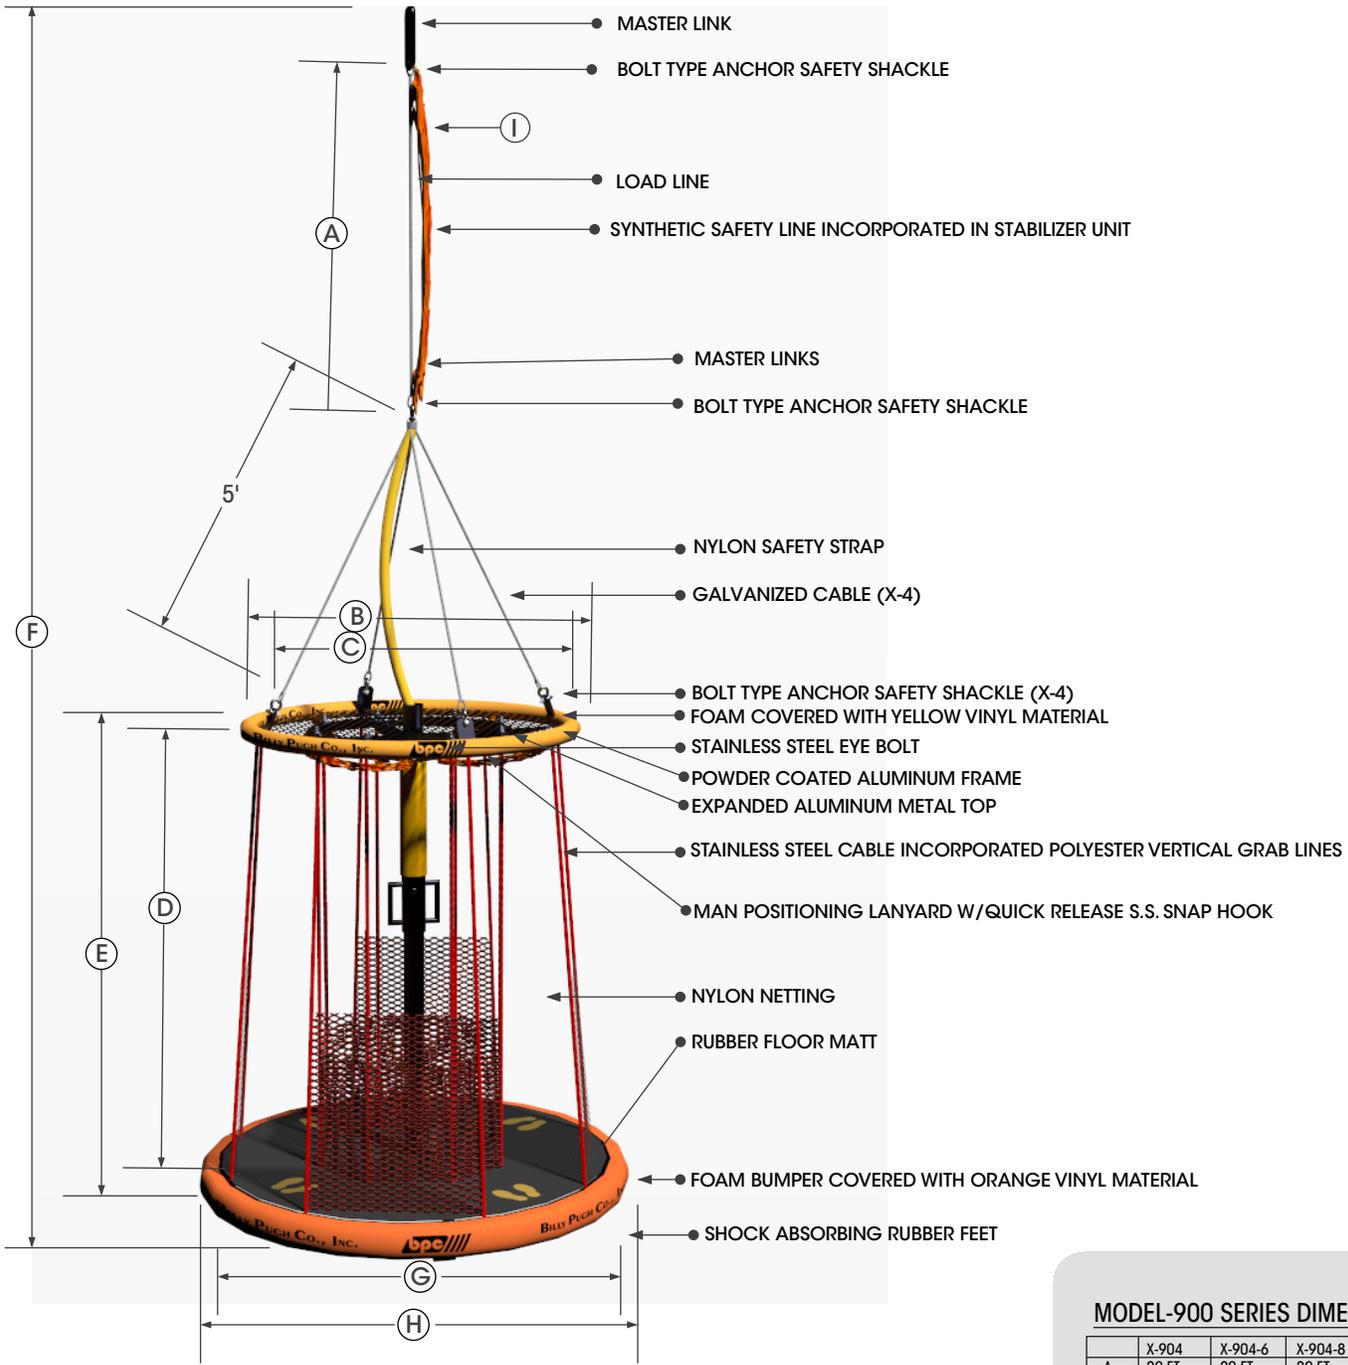

MODEL-900 SERIES DIMENSIONS

	X-904	X-904-6	X-904-8	X-904-10	X-904-12
A	20 FT.	20 FT.	20 FT.	b.20 FT.	b.20 FT.
B	67 INS.	79.5 INS.	79.5 INS.		
C	62 INS.	74.5 INS.	74.5 INS.	83 INS.	90 INS.
D	7 FT.				
E	8 FT.				
F	33 FT.				
G	74 INS.	89 INS.	89 INS.	100 INS.	107 INS.
H	85INS.	100 INS.	100 INS.	111 INS.	118 INS.
I	d. 11 FT.				

NOTES: NET WT 530 LBS.
 THE 900 SERIES PERSONNEL TRANSFERS
 ARE POWDER COATED